HEADQUARTERS
DEPARTMENT OF THE ARMY
DEPARTMENT OF THE AIR FORCE
Washington, DC, 1 November 1990

FIELD MANUAL No. 10-500-2 TECHNICAL ORDER No. 13C7-1-5

## AIRDROP OF SUPPLIES AND EQUIPMENT: RIGGING AIRDROP PLATFORMS

## TABLE OF CONTENTS

		Paragraph	Page
PREFACE			v
CHAPTER 1	AIRDROP INFORMATION		
	Responsibilities	1-1	1-1
	Types and Method of Airdrop	1-2	1-1
	Accompanying Loads	1-3	1-2
	Items and Loads Dropped in Cold Climates	1-4	1-5
	Safety Precautions	1-5	1-5
	Center of Balance	1-6	1-5
	Knots	1-7	1-7
	Emergency Aft Restraint	1-8	1-8
	Maximum Rigged Weight	1-9	1-8
CHAPTER 2	RIGGING INFORMATION		
Section I	AIRDROP PLATFORMS		
	Use	2-1	2-1
	Platform Limitations for Aircraft	2-2	2-3
	Type V Airdrop Platform	2-3	2-3
	Type II Modular Airdrop Platform	2-4	2-3
	LAPE Modular Airdrop Platform	2-5	2-3
Section II	AIRDROP SUPPLIES AND EQUIPMENT		
	Commonly Used Items	2-6	2-4
	Inspection and Strength of Items	2-7	2-4
Section III	SUSPENSION SLINGS		
	Cargo Slings	2-8	2-10
	Requirements	2-9	2-11

DISTRIBUTION RESTRICTION: Distribution authorized to US government agencies only to protect technical or operational information from automatic dissemination under the International Exchange Program or by other means. The determination was made on 30 April 1991. Other requests for this document will be referred to the Airborne and Field Services Department, USA Quartermaster Center and School, 1010 Shop Road, Fort Lee, VA 23801-1502.

DESTRUCTION NOTICE: Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

<sup>\*</sup>This manual supersedes FM 10-500-2/TO 13C7-1-5, 29 May 1984.

## C2, FM 10-500-2/TO 13C7-1-5

Section IV	LACHINGS	Paragraph	Page
Section IV	LASHINGS Use	2-10	2-13
	Components and Strengths	2-10	2-13 2-13
	Components and Strengths	2-11	2-13
Section V	CARGO PARACHUTES		
	Use	2-12	2-16
	Types	2-13	2-16
	Riser Extensions	2-14	2-18
Section VI	PARACHUTE RESTRAINT SYSTEM		
	Use	2-15	2-19
	Description	2-16	2-19
Section VII	EXTRACTION SYSTEMS		
Section vii	Use	2-17	2-20
	Components	2-17	2-20
	Operation	2-18	2-20 2-24
	oporano.	2 .,	221
Section VIII	RELEASE ASSEMBLIES		
	Use	2-20	2-25
	Description	2-21	2-25
	Inspection and Maintenance	2-22	2-25
	Operation	2-23	2-25
Section IX	EXTRACTION PARACHUTES AND SLING/EXTRACTION		
	LINE PANEL		
	Cargo Extraction Parachute	2-24	2-31
	Inspection, Maintenance, and Packing	2-25	2-31
	Requirements	2-26	2-31
	Sling/Extraction Line Panel	2-27	2-34
Section X	TRANSPORTATION OF RIGGED LOADS		
geetion 71	Responsibilities	2-28	2-36
	Typical Loading and Transporting Equipment	2-29	2-36
CHAPTER 3	PROCEDURAL INFORMATION		
Section I	PLATFORM AND HONEYCOMB PREPARATION		
	Inspecting Platforms	3-1	3-1
	Suspending Platform Loads	3-2	3-1
	Preparing Platforms	3-3	3-8
	Building Honeycomb Stacks	3-4	3-11
	Placing Honeycomb Stacks	3-5	3-12
	Heavy Drop Derigging System (HDDS)	3-5.1	3-12.1
Section II	ACCOMPANYING LOAD AND DROP ITEMS		
	Stowing Accompanying Loads	3-6	3-13
	Preparing Drop Items	3-7	3-13
	Covering Load	3-8	3-13
ii	-		

		en e		Paragraph	Page
Section III		SUSPENSION SLINGS AND LASHINGS			
Section III		Attaching Slings		3-9	3-14
		Safetying Slings		3-10	3-14
		Fitting D-Rings		3-10	3-16
		Lashing Load		3-11	3-16
		Safetying Load Binder Handles		3-12	3-19
		Forming 30-Foot, 45-Foot, or Greater		3-13	3-19
		Length Tie-down Strap		3-14	3-20
		Length Tie-down Strap		3-14	3-20
Section IV		CARGO PARACHUTES			
		Riser Extensions		3-15	3-21
		Stowing Riser extensions		3-16 -	3-27
		Stowing Cargo Parachutes		3-17	3-27
		Using Deployment Lines		3-18	3-27
		Restraining One Parachute		3-19	3-35
		Restraining Two to Eight Parachutes		3-20	3-36
Section V		EXTRACTION SYSTEMS			
1		Extraction Force Transfer Coupling (Platform)	1.	3-21	3-55
		Extraction Force Transfer Coupling		3-22	3-62 -
		Static Line/Connector Strap Extraction System		3-23	3-76
		Low-Altitude Parachute-Extraction		3-24	3-91
		Parachute Extraction System for LAPE		3-25	3-101
				3 23	3 10.
Section VI		RELEASE ASSEMBLIES			
		M-1 Cargo Parachute Release	• .	3-26	3-127
		M-2 Cargo Parachute Release		3-27	3-134
		Parachute Risers Attached to the Parachute	. 1		
		Release		3-28	3-136
		The 5,000-Pound-Capacity Cargo Parachute			
		Release		3-29	3-138
Section VII	1 1 1	EXTRACTION PARACHUTES			: · · · -
Section VII		Extraction Lines		3-30	3-145
		C-130 Aircraft		3-31	3-145
		C-141 Aircraft		3-31	3-143
		Extraction Parachute Clusters		3-33	3-155
		C-5 Aircraft		3-33.1	3-156.1
		MC-130 Aircraft		3-33.1	
	***	MC-130 Aliciait		3-33.4	3-156.9
Section VIII	1	LOAD MARKING AND INSPECTION		1.1 ± 1.1 ± 1.1	
		Marking Rigged Load		3-34	3-157
				3-35	
<u>.</u>		Emergency Aft Restraint Requirement for			
		Platform-Extracted Loads Rigged on a			
* *		Type V Platform		3-36	3-158
				. = =	
		en e			
					1
	in the s				iii

## C2, FM 10-500-2/TO 13C7-1-5

CHAPTER 4	60K LOW-VELOCITY AIRDROP SYSTEM	Paragraph	Page
	Description of 60K System Platforms for 60K Airdrop System Suspension Slings for 60K Airdrop System Cargo Parachutes Preparing Riser Extensions for Attachmemt to Release Connecting Parachute Riser Extensions 60K Release 60K Extraction Force Transfer Coupling (EFTC) On the Aircraft Derigging	4-1 4-2 4-3 4-4 4-5 4-6 4-7 4-8 4-9 4-10	4-1 4-3 4-6 4-9 4-11 4-13 4-15 4-17 4-20 4-20
GLOSSARY		Glossary-1	
REFERENCES		References-I	